


EN

USER  
MANUAL

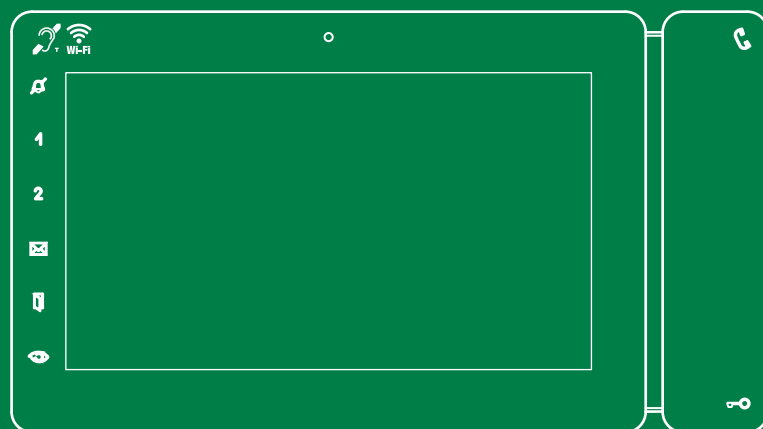

Maxi ViP - Art. 6802B, 6802W, 6802W/BM  
Maxi ViP Wi-Fi - Art. 6842W

 **Comelit**<sup>®</sup>  
Passion. Technology. Design.


# Warning

- This Comelit product was designed for use in the creation of audio and video communication systems in residential, commercial or industrial settings and in public buildings or buildings used by the public.
- All activities connected to the installation of Comelit products must be carried out by qualified technical personnel, with careful observation of the indications provided in the Manuals / Instruction sheets supplied with those products.
- Cut off the power supply before carrying out any maintenance procedures.
- Use wires with a cross-section suited to the distances involved, observing the instructions provided in the system manual.
- We advise against running the system wires through the same duct as the power cables (230V or higher).
- To ensure Comelit products are used safely:
  - carefully observe the indications provided in the Manuals / Instruction sheets
  - make sure the system created using Comelit products has not been tampered with / damaged.
- Comelit products do not require maintenance aside from routine cleaning, which should be carried out in accordance with the indications provided in the Manuals / Instruction sheets.
- Any repair work must be carried out:
  - for the products themselves, exclusively by **Comelit Group S.p.A.**,
  - for systems, by qualified technical personnel.
- **Comelit Group S.p.A.** does not assume any responsibility for:
  - any usage other than the intended use
  - non-observance of the indications and warnings contained in this Manual / Instruction sheet.
- **Comelit Group S.p.A.** nonetheless reserves the right to change the information provided in this Manual / Instruction sheet at any time and without prior notice.
- The manufacturer, **Comelit Group S.p.A.**, hereby declares that the radio equipment art. 6842W conforms to directive 2014/53/EU. The full EU conformity declaration is available at the following web address: [pro.comelitgroup.com/product/6842w](http://pro.comelitgroup.com/product/6842w)

## Table of contents

Description.....	3	Wi-Fi connection ( <i>applies to art. 6842W</i> ).....	6
Key functions.....	3	“Wi-Fi connection status” icon.....	6
Activating function keys:.....	3	Wi-Fi setup.....	6
LED signals.....	3	Wi-Fi reporting unconnected.....	7
Menu.....	4	App registration enable.....	7
Date and time settings.....	4	User Setup menu.....	8
Functions available.....	4	Language.....	8
Intercoms.....	4	Lock keypad and touch screen.....	8
Cameras.....	4	Information.....	8
Actuators.....	5	Volume adjustment.....	8
Doors open.....	5	Backlight adjustment.....	9
Memory setup.....	5	Melody settings.....	9
Video memory.....	5	Activating direct keys.....	9
Record always.....	5	User administration ( <i>applies to art. 6842W</i> ).....	9
Message.....	5	Screensaver.....	10
Video memory.....	6	Installer setup menu.....	10
Call divert.....	6	NAVIGATION TREE.....	10

# Description

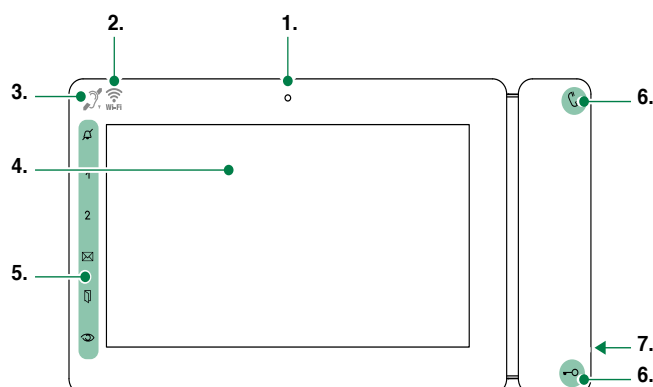

1. Microphone
2. Built-in Wi-Fi (Art. 6842W only)
3. Built-in magnetic induction loop (Art. 6842W, 6802B, 6802W/BM only)
4. 7" touch screen
5. Soft-touch keys / Indicator LEDs
6. Soft-touch keys / Indicator LEDs
7. Micro SD card port

## Key functions



**AUDIO:** allows you answer incoming calls

✓ Incoming call:

- ▶ Press to start the conversation
- ▶ Press again to interrupt the conversation
- » It is possible to resume the conversation with the external unit for as long as the LED continues to flash



[programmable]

**LOCK-RELEASE:** opens the corresponding door lock

**ACTUATOR:** allows activation of the associated relay



[programmable]

**PRIVACY:** the ringtone will be silenced on receipt of a call from the external unit and from the switchboard

**DOCTOR:** allows automatic operation of the lock-release on receipt of a call from an external unit

**PRIVACY + DOCTOR:** activates both functions

1 2

[programmable] [Default: deactivated]

**INTERCOM / SELF-IGNITION / CALL PRIORITY 1-4 / LOCK-RELEASE / ACTUATOR / ACTIVATE OUTPUT / FUNCTION DISABLED**



**MESSAGE MENU:** allows access to the Message section



**DOORS OPEN:** allows access to the Doors open section




[programmable]

**SELF-IGNITION:** allows ignition of the external video unit, and therefore viewing of the external image

**INTERCOM / SELF-IGNITION / CALL PRIORITY 1-4 / LOCK-RELEASE / ACTUATOR / ACTIVATE OUTPUT / FUNCTION DISABLED**

## Activating function keys:

- ▶ Touch to activate the function keys.

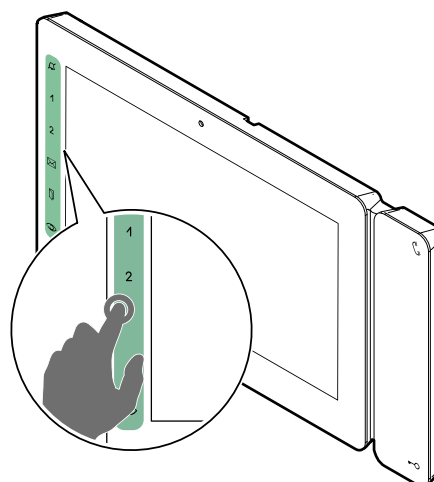

## LED signals



**STEADY LED:** audio active

**FLASHING LED:** call in progress



**1 FLASH:** door opening confirmation

**FLASHING LED:** call in progress



**3 FLASHES EVERY 5 SEC.:** Doctor mode activated

**STEADY LED:** Privacy mode activated

**Alternate STEADY AND FLASHING LED:** Doctor and Privacy active



**STEADY LED:** video memory activated / call divert activated

**FLASHING LED:** indicates new message received




**STEADY LED:** signals the opening of one or more doors


# Menu

The menu icons vary depending on the type of system installed and the functions available. To navigate the menu, simply use your finger to touch the icon corresponding to the desired function.

- Touch the display to access the main menu

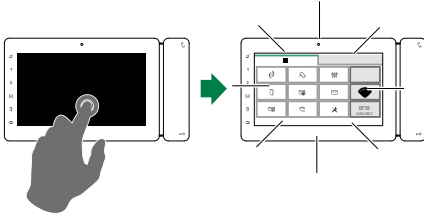


- Press the desired menu option to select it

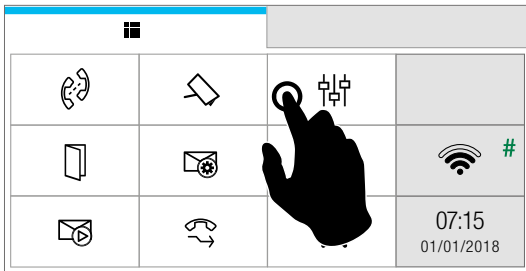

# With Art. 6842W only


- Navigate the menus by scrolling up/down through the page

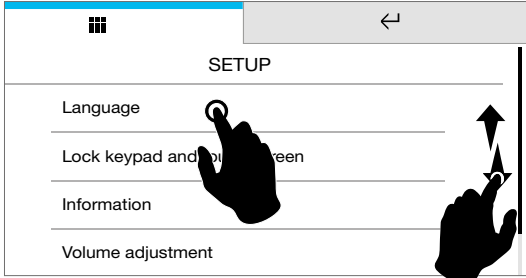

- Short press the icon ↶ to return to the previous screen


## Date and time settings

 This function allows you to set the time and date of the device.

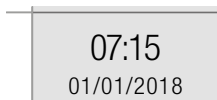

- Press the date and time

- To automatically update the date and time via internet, select **“Automatically set the Date & Time”**

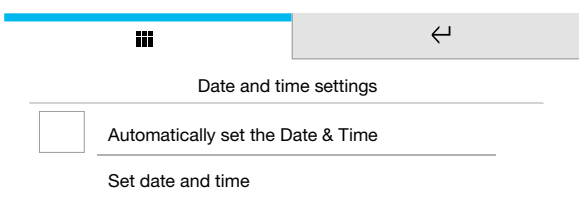

or you can set the date and time manually:

- Select **“Set date and time”**




Set the desired values for day / month / year / hours / minutes



Save the configuration

## Functions available

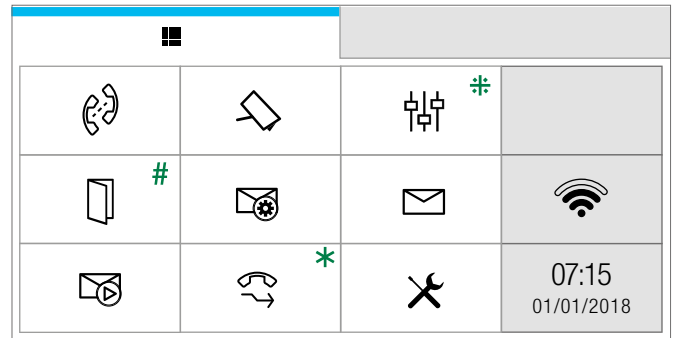

\* Function can be enabled via ViP Manager software

# Only available if the corresponding Directory has been configured

\* Only available if the “call divert” function has been configured

## Intercoms

This function allows you to call addresses saved in the directory.




- Press the icon to access the function, then select from the directory the device which you wish to call

### Or make a “direct call”

[Function can be disabled using ViP Manager software]

1. Press the icon 123 to call a specific ViP address

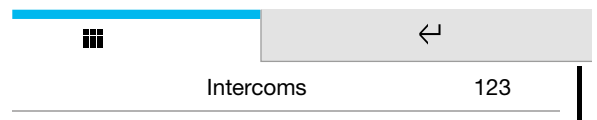

2. Enter the address in the field to start the communication

## Cameras


This function allows you to view a directory of cameras and to start live streaming.



- Press the icon to access the function, then select from the directory the camera to be interrogated

## Actuators


This function allows you to activate an actuator by selecting it from the programmed directory.

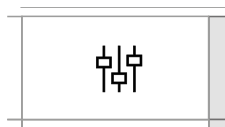

- Access the dedicated section, then select the command you wish to activate from the directory



## Doors open


This function allows you to view a directory of doors to check their status (open/closed).

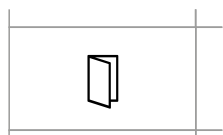

1. Press the icon in the main menu to access the directory
  - » the blue icon indicates that the door is open
  - » the black icon indicates that the door is closed

2. Select the door to interrogate in order to start live streaming from the camera

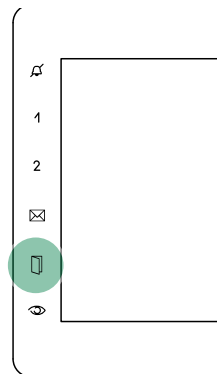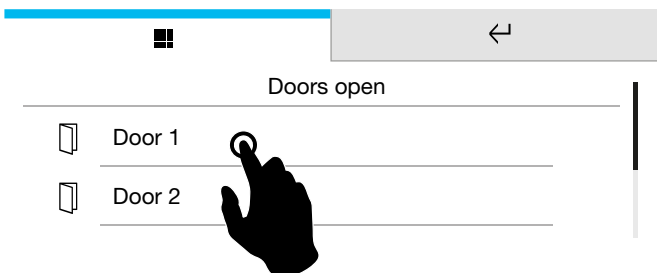


- »  The soft-touch key LED illuminates to indicate that one or more doors are open
- Press the icon to instantly access the "Doors open" directory

## Memory setup

This function allows you to manage the parameters for the device's video memory function.



- Press the icon to access the dedicated sub-menu

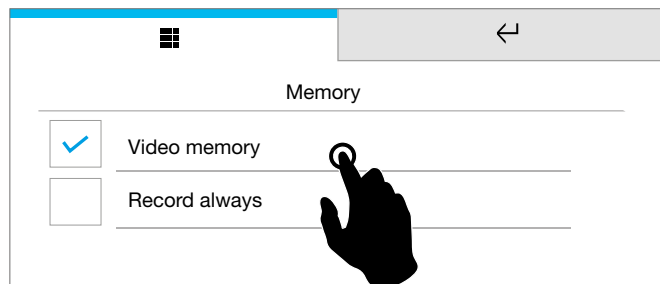

### Video memory

This function automatically starts audio/video recording in the event of no reply.

- Tick the box to enable the function



- » The icon in the main menu changes colour



- » The soft-touch key LED illuminates (Steady light)

### Record always

This function automatically starts audio/video recording on receipt of a call from an external unit.

- Tick the box to enable the function (**The Video memory box must also be ticked**)

## Message


This function allows you to manage the ViP messaging system of the device.




1. Press the icon to access the dedicated sub-menu

2. Press VIDEO MESSAGES to access the video memory sub-menu

- » the blue icon indicates that there is at least one new message (that has never been viewed)
- » the black icon indicates that all messages have already been viewed

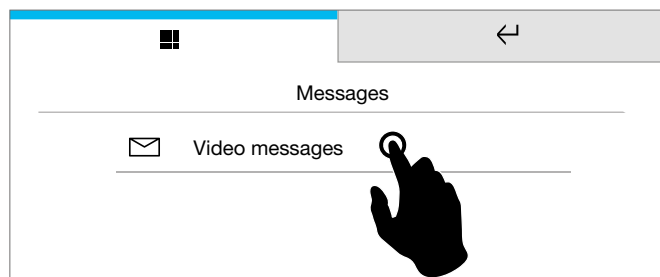

Example:

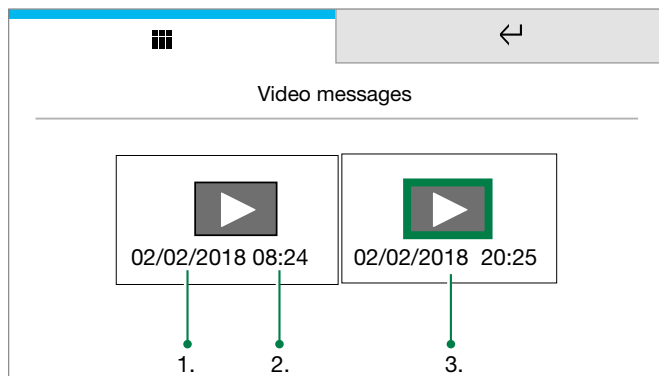

1. Date

2. Time

3. Example of a previously viewed recording

» the green rectangle indicates that the message has already been viewed

- ▶ Short press on the video recording preview to START playback
- ▶ Short press on the video recording to STOP playback
- ▶ Long press to DELETE the video recording

## Video memory

This function allows you to enable/disable the video memory on the device.



- ▶ Press the icon to enable the function
- » The blue icon indicates that the function is active
- » The soft-touch key LED illuminates (Steady light)

## Call divert

This function allows you to quickly enable/disable the call divert function.



- ▶ Press the icon to enable the function
- » The blue icon indicates that the function is active

## Wi-Fi connection (applies to art. 6842W)

The icon in the main menu offers quick access to the Wi-Fi options/functions of the device while indicating its connection status.



- ▶ Press the icon to access the dedicated section

### “Wi-Fi connection status” icon

The Wi-Fi connection may assume any of the following statuses:



#### Access point

If the system requires wireless connection of the monitor, link the device to the local router.



#### No connection

Monitor Wi-Fi reception is enabled, therefore you need to check the router conditions (on/off, correct operation, distance from the monitor, correct password).



**Router connected, no internet:** check with your internet provider



#### Wi-Fi off

If the system requires wireless connection of the monitor, access the relevant setup menu and confirm "Enable Wi-Fi".

#### Connection with varying degrees of signal strength:



Excellent



Moderate




Good




Weak

### Wi-Fi setup

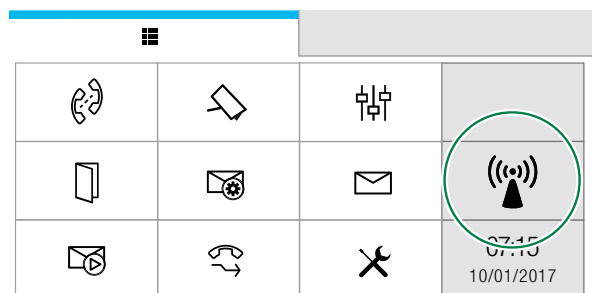


- ✓ If the system requires wireless connection of the monitor.

1. Access the relevant setup menu and select "Wi-Fi enable". (Default ON)

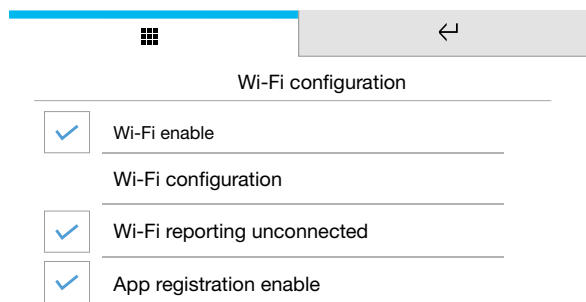

2. Press *Wi-Fi configuration* to identify the available networks.

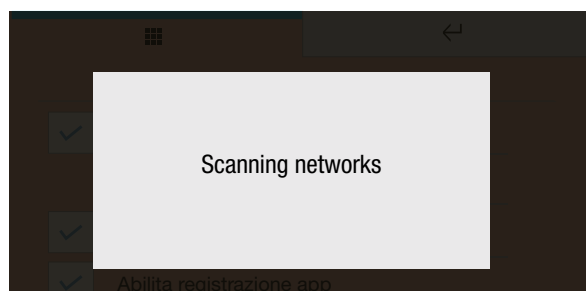

### Procedure via WPS


- 3A. Press WPS for secure linking via WPS and follow the instructions which appear on the screen.

» On completion of the operation a confirmation message will be displayed.


- 4A. Install the COMELIT application on your smartphone to ensure you have all the device functions at your disposal. (See "Smart Registration" manual, available from [pro.comelitgroup.com](http://pro.comelitgroup.com) under code 6842W)

### Manual procedure

- 3B. Select your router's network.

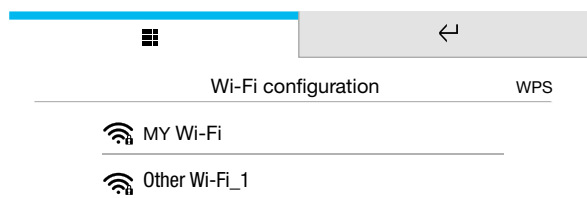

- 4B. Enter the password and confirm

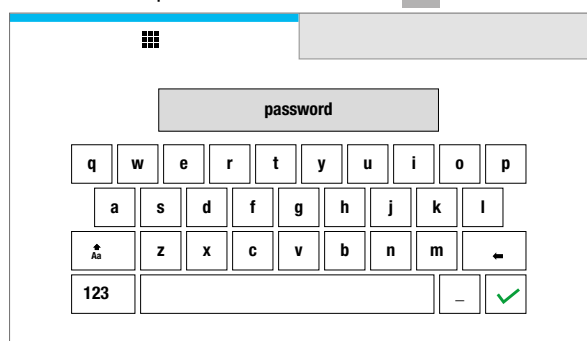

- 5B. Install the COMELIT application on your smartphone to ensure you have all the device functions at your disposal. (See "Smart Registration" manual, available from [pro.comelitgroup.com](http://pro.comelitgroup.com) under code 6842W)


### Procedure via App

Wi-Fi setup can take place directly through the App (see "Smart Registration" manual, available from [pro.comelitgroup.com](http://pro.comelitgroup.com) under code 6842W)

### Wi-Fi reporting unconnected

The lack of Wi-Fi connection will prevent calls from being received on a smartphone (and, in some types of system, on the monitor too) and cancels all main functions that can be controlled via the app.


The monitor provides pop-up notification in the event that there is no Wi-Fi connection between the monitor and the router.

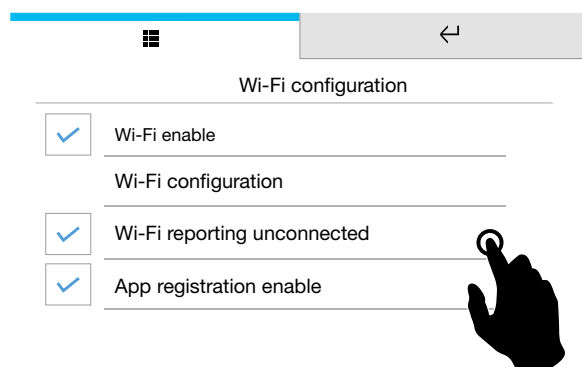


This pop-up can be enabled / disabled as desired.

### App registration enable

The tick permits a new user to register a new smartphone or tablet via Smart registration.

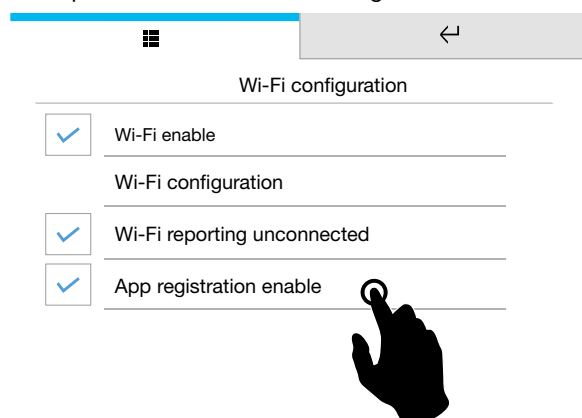


# User Setup menu

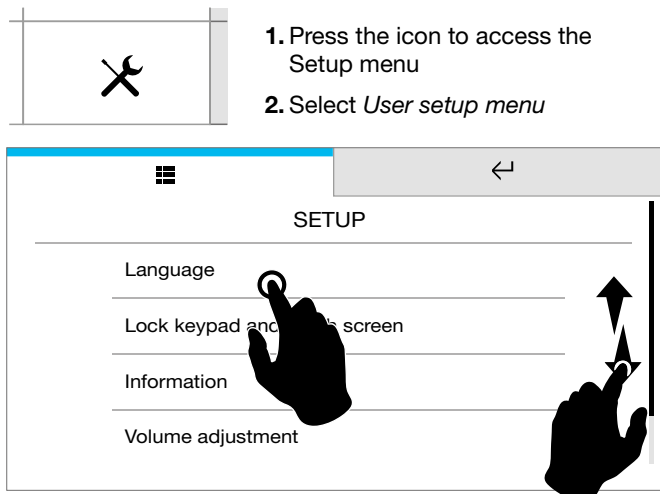


- Swipe your finger up or down to view all the available menu options
- To access the desired sub-menu, press the corresponding option

## Language

You can change the interface language.

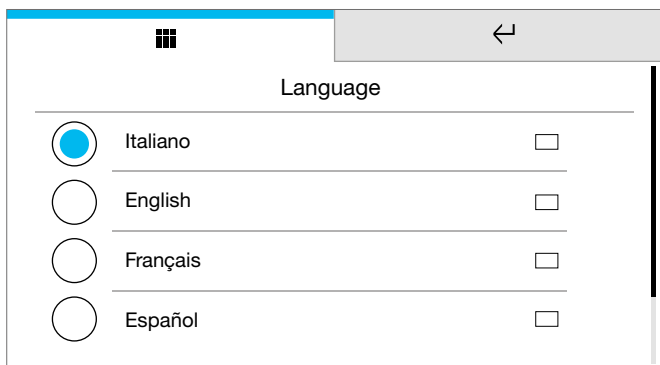


- Select the desired language by pressing the relative icon, then confirm the selection

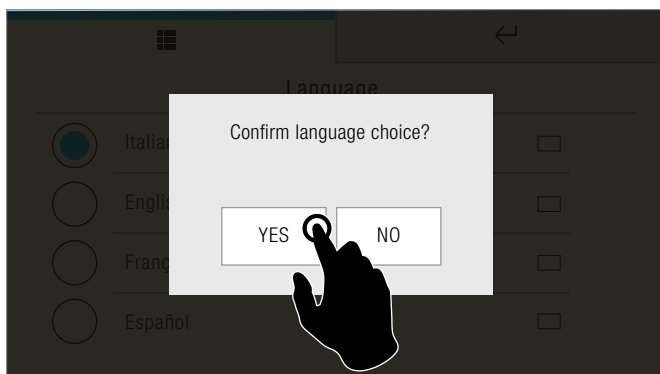

## Lock keypad and touch screen


The function can be used to lock the device touch screen for 60 seconds, for cleaning purposes.

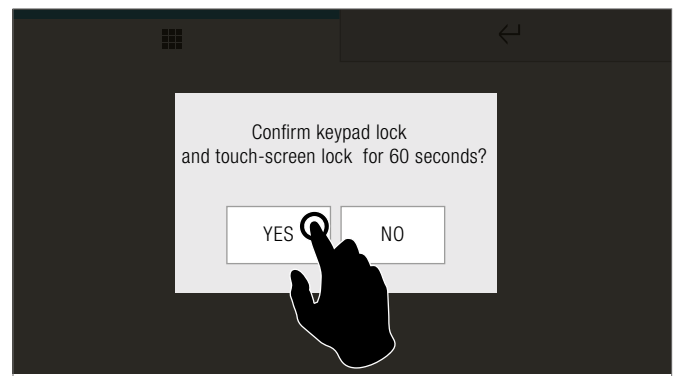

- Confirm the operation
- » After 60 seconds, the screen is unlocked automatically

## Information

This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.)

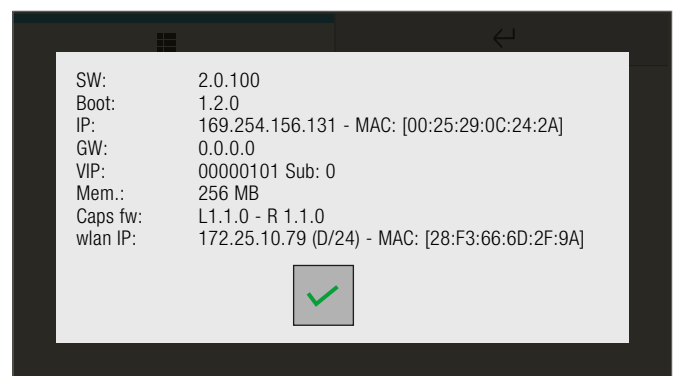


Press the confirm icon to exit the screen

## Volume adjustment


The menu allows you to manage and control the audio volumes associated with the various functions of the device.

### 1. Select the desired option

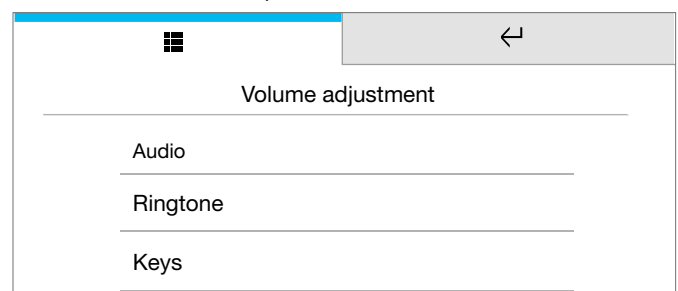



## 2. Press and drag the cursor to adjust the volume

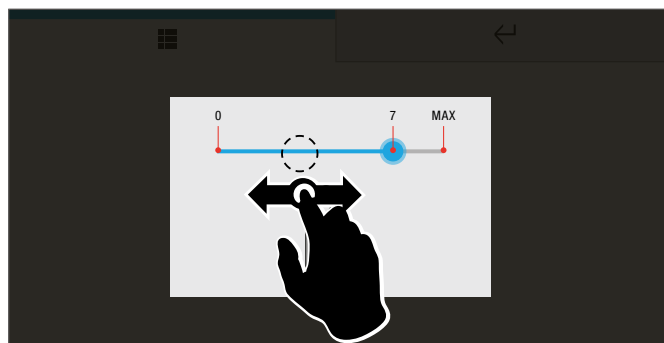


Save the configuration

## Backlight adjustment

*It is possible to increase and reduce the monitor backlighting level.*

- Move the cursor to select the desired brightness


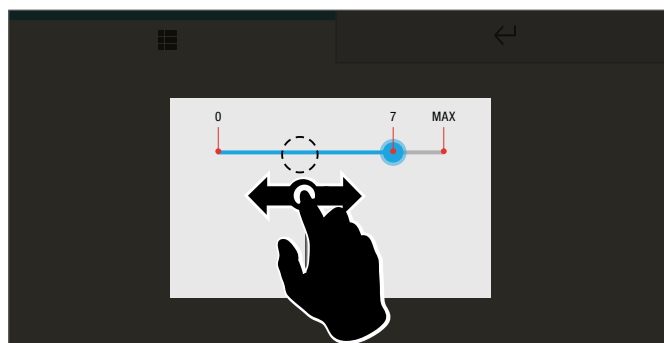


Save the configuration

## Melody settings

*From the menu you can choose a melody for each of the device's call functions.*

1. Select the desired option

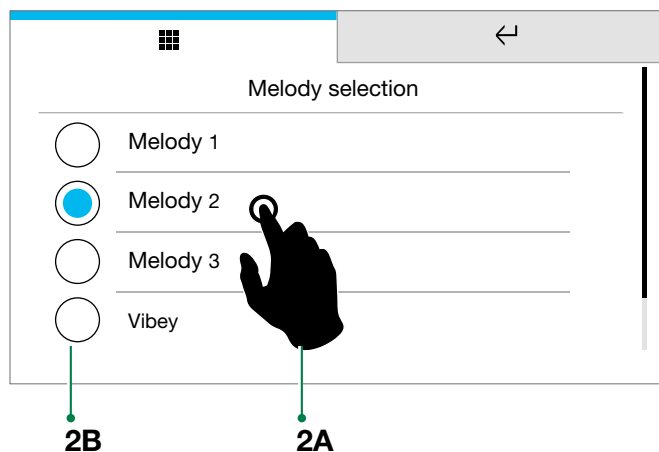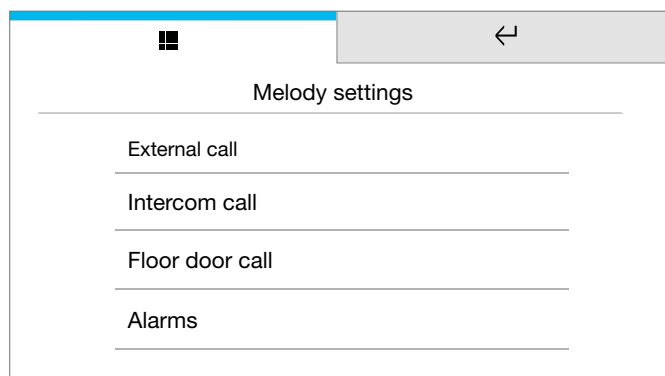

**2A.** Press the name of the melody to hear a preview


**2B.** Press the circle to confirm the selected ringtone

- Press and release the icon to return to the previous screen.

## Activating direct keys


*This option can be used to set the various activation modes for the function keys*

- deselect the function **"Activate direct keys"** to ensure the keys are always active and ready to carry out the programmed function when pressed (recommended for black monitors)
- tick the option **"Activate direct keys"** to deactivate the function keys, which will then have to be touch-activated before they are ready to carry out the programmed function when pressed (recommended for white monitors)

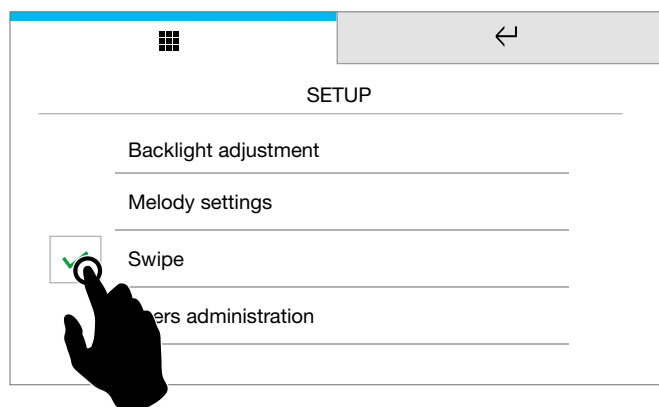

## User administration (applies to art. 6842W)


*The function can be used to alternately allow a user to operate the app connected to the device, or to prohibit them from doing*

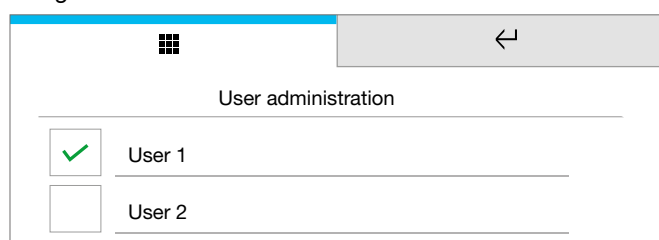


# Screensaver

When the monitor is in standby, as an alternative to the display being off you can choose to show a series of images that change every 5 seconds.

- You can save up to 50 images.
- Images can be uploaded in .jpeg and .png format, maximum resolution 1280 x 720 pixel.

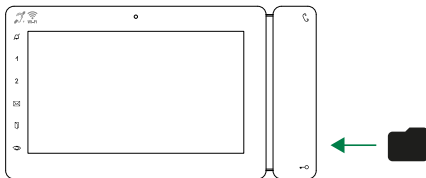

- ▶ Upload the images onto a micro SD card (*not supplied*) in a folder called “**ssaver**”.
- ▶ Insert the SD card into the door entry monitor.

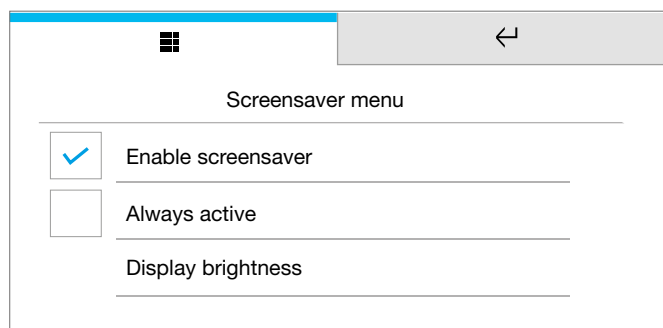


- ▶ Select *Enable screensaver*
- ▶ Set the duration of the screensaver display by setting a time in seconds (up to 600) or by setting *Always active*.
- ▶ You adjust the brightness by moving the cursor from 0 to 9.

# Installer setup menu



1. Press the icon to access the Setup menu
2. Select *Installer setup menu*

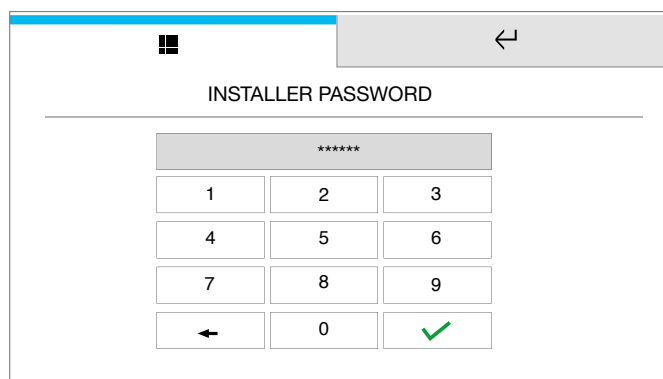

3. Type in the password (default = **0000**) and confirm ✓
4. To access the desired sub-menu, press the corresponding option

# NAVIGATION TREE

## INSTALLER SETUP MENU .....

**Directories** .....  
Intercoms .....  
Actuators.....  
Doors .....  
Cameras.....  
Set the app directories modification lock

## Key programming.....

🔑 .....  
Lock-release .....  
Actuator .....  
Function disabled .....

1/2/👁 .....  
Intercom.....  
Self-ignition.....  
Alarms.....  
Lock-release .....  
Actuator .....  
Activate output .....  
Function disabled .....

🔔 .....  
Privacy .....  
Doctor.....  
Privacy/doctor .....  
Function disabled .....

## Reset .....

Factory reset .....

## Addresses .....

ViP address programming .....  
Master.....  
Slave.....

## Set ringtone repetition.....

External call .....  
Intercom call .....  
Floor door call.....

## Set call times .....

Awaiting reply .....  
Talk .....  
Intercom conversation .....  
Reset wait time.....  
Off delay time .....

## Call divert.....

Configure ViP address.....  
Wait time.....  
Activate timed divert.....  
Activate divert when busy .....

## Alarms .....

Alarm .....  
Panic.....  
Fire.....  
Priority call 4 .....

## Hands-free .....

## Ethernet reporting not connected .....

## Check for conflicts between nets ethernet and Wi-Fi .....

## Configure slaves.....

1/15: Not assigned - User 1/15 .....

**We recommend using ViP Manager software - available to download from the website [pro.comelitgroup.com](http://pro.comelitgroup.com) - to configure the internal unit**

CERTIFIED MANAGEMENT SYSTEMS



[www.comelitgroup.com](http://www.comelitgroup.com)

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

 **Comelit®**  
Passion. Technology. Design.