

ELMDENE

Protecting People & Property

Elmdene International Ltd
3 Keel Close, Interchange Park,
Portsmouth, Hampshire, PO3 5QD, UK

Tel: +44(0)23 9269 6638

Fax: +44(0)23 9266 0483

Web: www.elmdene.co.uk

13.8Vdc Switch Mode Power Supply

GEN2-08-y[#] for 8Ah Battery and up to 1.0A* Continuous Load Current

GEN2-18-y[#] for 18Ah Battery and up to 1.5A* Continuous Load Current

FEATURES

High efficiency cost effective power supply suitable for use in systems designed to comply with PD6662:2010 and EN50131-6:2008 Grade 2 and Environmental Class II requiring 8Ah or 18Ah standby battery capacity. Two independent output signals are provided for loss of mains fault (EPS**), and general fault (including APS** fault). Self-diagnostics can detect blown output and battery fuses and low battery voltage (APS fault). The PSU incorporates a battery management system comprising low battery voltage detection and deep discharge protection to ensure that the battery is not permanently damaged through excessive discharge. A brownout filter ensures that short mains voltage dips do not create a false loss of mains alarm. Two LEDs assist with quick and easy installation by showing presence of mains, correct battery charging and a fault condition. Comprehensive protection is built-in as standard including mains transient filtering, electronic output overload protection and fuses on the load and battery outputs.

- PD6662:2010 and EN50131-6:2008
Type A, Security Grade 2
Environmental Class II Compliant
- Low quiescent battery monitoring current during standby operation
- Fault signals for loss of mains, power supply fault, and battery low voltage warning
- Battery Deep Discharge Protection
- Protection against reverse battery connection
- LED for comprehensive diagnostics
- Thermal protection of power circuitry
- Mains transient suppression and brown-out filter
- Fully enclosed lid tamper circuit

"y" Denotes enclosure size – see overleaf

* See table overleaf to determine continuous standby battery current available for given standby times

** EN50131 Definitions: EPS = External Power Source APS = Alternative Power Source

SPECIFICATION

Mains Input

Rated Voltage / (Operational Voltage) 100-240Vac / (90 – 265Vac)
 Frequency 50/60Hz
 Input current **GEN2-08 & GEN2-18 < 1.0A** at full load
 Fuse T2A 20mm HRC

Output

| | GEN2-08-y | GEN2-18-y |
|-----------------------------------|------------------------------------|------------------------|
| Voltage at full load | | |
| Mains power | 12.8 –14.2Vdc (13.8Vdc nominal) | |
| Battery standby | 9.8 – 13.0Vdc | |
| Ripple | <400mV pk – pk max @ Rated Voltage | |
| Fuse | | |
| Load | F1.0A | F1.6A |
| Battery | F1.0A | F1.6A |
| Continuous Output Current* | | |
| Mains | 1.0 A | 1.5A |
| Battery for 12 hours | 0.6A with 8Ah Battery | 1.5A with 18Ah Battery |

*See below for quiescent current of PSU under battery when calculating total system standby current resources.

Mechanical

| Product Reference | GEN2-08-A | GEN2-08-B GEN2-18-B | GEN2-08-C GEN2-18-C |
|--|---------------------------------|------------------------|------------------------|
| Enclosure Dimensions w x h x d (mm) | 230 x 200 x 80 | 355 x 330 x 80 | 330x 275 x 80 |
| Weight (kg) excluding battery | 2.0 | 4.0 | 3.3 |
| Material | 1.2mm steel white powder coated | | |

Environmental

Temperature -10 to +40°C (operating) 75% RH non-condensing
 -20 to +80°C (storage)

Standby Battery Management

Warning: risk of explosion if incorrect battery type fitted

Maximum Battery Size
 (Not supplied with unit)

GEN2-08: 8Ah 12V Valve Regulated Lead Acid
 GEN2-18: 18Ah 12V Valve Regulated Lead Acid

Intelligent Battery Recharge Time:

< 72 hours to 80% - A heavily discharged battery having a terminal voltage > 9.0V will attempt to be charged.

Testing:

Battery Not Present: <9.0V battery voltage
 Low battery voltage: <11.5V (no mains present)
 Active load test at full rated output current

Protection:

Reverse battery connection protection
 Deep discharge protection - Battery disconnect at 10.6V battery terminal voltage

Quiescent Current:

64 mA when running on battery - less than 1 mA after deep discharge protection.

Battery Cold Start (BCS)

Momentarily link BCS pins together to connect battery to load if PSU commissioned without any mains

SIGNALLING OUTPUTS

| | |
|------------|---|
| Rating: | 0.10A @ 60Vdc 16Ω solid state relay contacts, volt free. |
| EPS Fault: | Open if Loss of mains for >8s |
| GEN Fault: | Open if Battery terminal voltage < 11.5v (when operating in standby with no mains present), battery not present or Output and/or battery fuse blown |
| Tamper: | 0.5A @ 30Vdc volt free contact. Open when lid is open. |

CONNECTIONS

| | |
|------------|---|
| O/P +, - | Connection to equipment to be powered (Observe polarity) |
| EPS Fault: | Relay output for mains fail. Open if loss of mains. |
| GEN Fault: | Relay output for General Fault. Open in fault condition |
| BATT +, - | Connection to standby battery. Use cables provided (Observe polarity) |

INSTALLATION AND COMMISSIONING

This unit is only suitable for installation as permanently connected equipment. This PSU is *NOT SUITABLE* for external installation. *EQUIPMENT MUST BE EARTHED*. Before installation, ensure that external disconnect device is *OFF*. The PSU should be installed according to all relevant safety regulations applicable to the application.

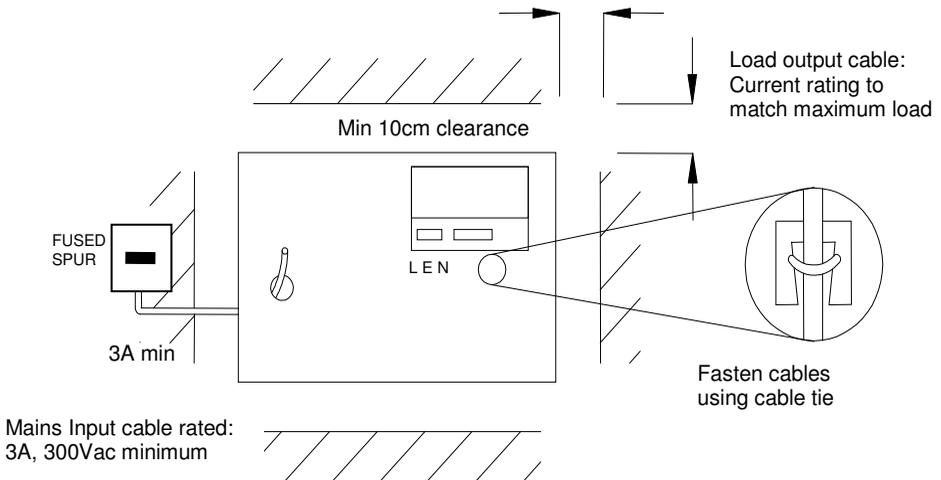


Fig 1.0 Mounting of Power Supply

Mounting

- 1) Mount securely in correct orientation allowing minimum clearance – see Fig. 1.0
- 2) Route mains and low voltage output cables via different knockouts and/or cable entry holes.
- 3) Use bushes and cable glands rated to UL94 HB minimum.

Mains Power Up

- 4) Attach correctly rated mains cable (minimum 0.5mm² [3A], 300/500Vac). Fasten with cable ties.
- 5) Apply mains power.
 - Check for 13.8V on load outputs.
 - Check green Mains LED is ON.
- 6) Disconnect mains power.

Load Output

- 7) Attach correctly rated load cable and fasten using cable ties. Note polarity.
- 8) Apply mains power.
 - Check Green Mains LED is ON.
 - NOTE:** Red Fault LED may flash to indicate no battery has been connected, this is normal.
 - Verify load is operating correctly.
- 9) Disconnect mains power.

Signalling

- 10) Connect EPS and GEN fault outputs to appropriate inputs of control and indicating equipment (CIE).

Standby Battery

- 11) Attach supplied battery cables to terminal block and batteries.
 - NOTE:** ensure correct polarity of battery connections: **+ve** use **Red** lead, **-ve** use **Black** lead.
- 12) Position the battery as shown in Figures 2 - 6 below, avoiding the cover earth connection spades and the cover retaining screws. Adjust battery bracket to hold battery in position.

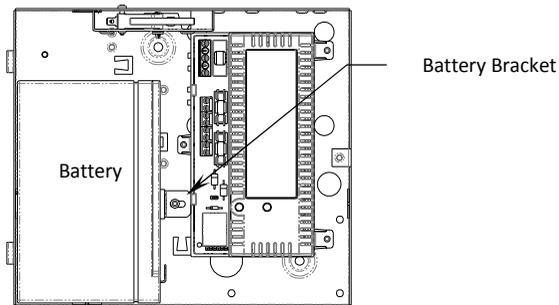


Fig 2 GEN2-08-A

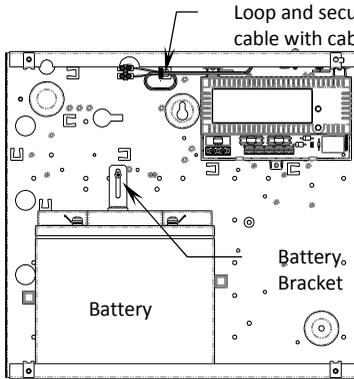


Fig 3 GEN2-18-B

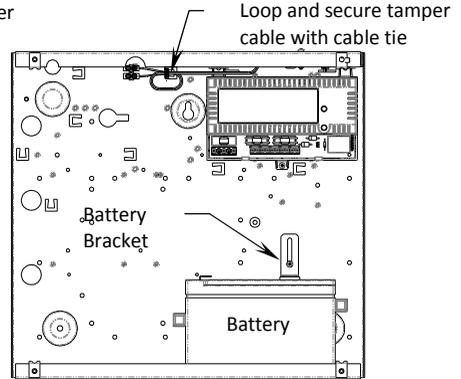


Fig 4 GEN2-08-B

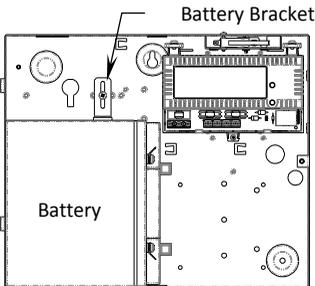


Fig 5 GEN2-18-C

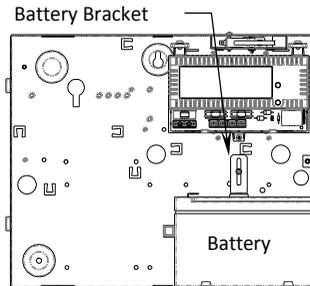


Fig 6 GEN2-08-C

- 13) Apply mains power.
Check that Green Mains LED is ON.
Check there is no fault indicated by the Red Fault LED, refer to diagnostic table on page 6.
- 14) Disconnect mains power.
Check that the batteries continue to supply voltage and current to the output load.
Check that Green Mains LED is OFF and the control panel displays a Loss of Mains (EPS) fault
NOTE: Batteries must have sufficient charge to supply the output load
- 15) Reconnect mains power.
Check that Green LED is ON.
- 16) Remove Output fuse.
Check that Red Fault LED is indicating a fault, refer to diagnostic table on page 6, and that the control panel shows a General PSU fault.
- 17) Replace Output fuse.
Check that Red Fault LED is OFF and General PSU fault has cleared at control panel.

Tamper

- 18) Connect tamper switch to appropriate inputs of control and indicating equipment (CIE).
- 19) Check that the tamper switch is CLOSED when the lid/cover is closed and the retaining screw is fitted, OPEN when the lid/cover is open.

COMPLIANCE

This power supply unit meets the essential requirements of the following EU Directives:

EMC: 2004/108/EC
Low Voltage: 2006/95/EC
WEEE: 2002/96/EC



This product is suitable for use in systems designed to comply with PD6662:2010 at Grade 2 and Environmental Class II

EN50131-6:2008 Type A Security Grade 2
Environmental Class II

Certification Body: Telefication B.V.
Edisonstraat 12A
Zevenaar, 6902 PK
The Netherlands
+31 (0) 316 - 583 180
<http://www.telefication.com>

DISPOSAL OF PRODUCT AT END OF LIFE

This product falls within the scope of EU Directives 2002/96/EC Waste Electrical and Electronic Equipment (WEEE) and 2006/66/EC (Battery). At the end of life, the product must be separated from the domestic waste stream and disposed via an appropriate approved WEEE disposal route in accordance with all national and local regulations.

Before disposal of the product, any batteries must be removed, and disposed separately via an appropriate approved battery disposal route in accordance with all national and local regulations. Package used batteries safely for onward transport to your supplier, collection point or disposal facility.

***Caution: Risk of fire or explosion
if bare battery wires are allowed to touch.***

See Specification for battery type information. The battery is marked with the crossed out wheelie bin symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg).

For more information see: www.recyclethis.info

*The packaging supplied with this product may be recycled.
Please dispose of packaging accordingly.*