

# Waterproof Keypad

## AS626S-200 & AS626M-200 Instructions

### MOUNTING INSTRUCTIONS



Connect keypad using wiring Diagram below.

### WIRING DESCRIPTION

POWER	12 or 24v AC or DC (AC does not have a polarity)
BROWN	+ Positive
BLUE	- Negative
OUTPUT RELAY	Max 2amp @ 24v
BLACK	Common
RED	Normally Open (NO) Fail Locked Devices
YELLOW	Normally Closed (NC) Fail Unlocked Devices
EXIT BUTTON	Push to make – Volt free
WHITE/ORANGE	Exit Button (NO)
<b>Power Consumption</b>	Stand by – Approximately 25 milliamps @12vDC Operation – Approximately 80 milliamps @12vDC



For **12vDC** inductive loads such as electric strikes and electromagnetic locks, the enclosed **12vDC** metal oxide varistor must be connected in parallel with the load, at the load terminals and not in the keypad.



Ensure power supply is of correct rating, taking into account the current requirements of the locking items and accessories.



Do not insert security plugs into fixing holes until all installation and testing has been completed. These items require drilling out and cannot be re-fitted.

### ACTIVATION

LED signaling explanation


GREEN LED:	Door Strike activated	(unlocked)
RED LED	Normal Operation:	3 sec. ON = wrong Code Entry
		Slow flashing = wrong code entry 3 times
	Programming Mode:	Fast flashing = programming different functions
		Slow flashing = programming stand-by
		Very fast flashing = erasing all user codes

The door remote opening (via exit switch) is possible when a dry contact is made between the wires White and Orange. The lock is activated for the time the system is programmed. Factory set @ 5 seconds. Remote opening is disabled during programming and latch mode.

### INITIALISATION

**Apply power** to the keypad

The keypad's buzzer will sound briefly, the Red LED will illuminate briefly. Initialisation is now complete, with a default master code of 1-2-3-4 and a 5-second open door.

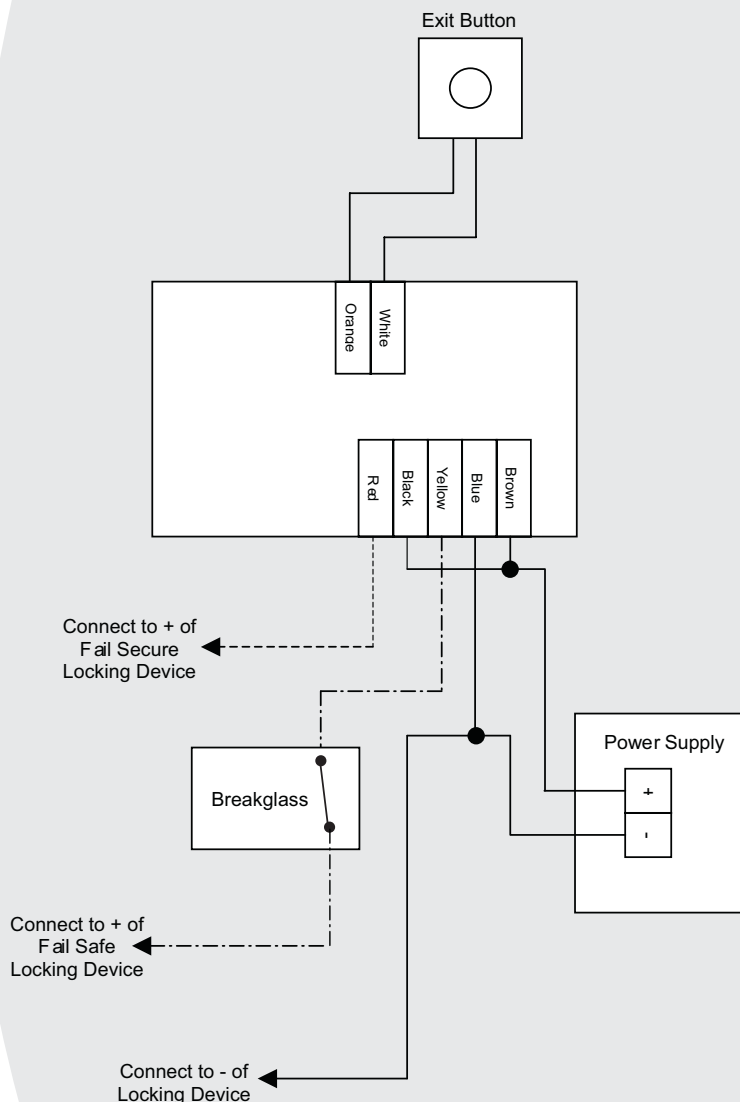

# Waterproof Keypad

## AS626S-200 & AS626M-200 Instructions

### TESTING THE UNIT

Enter the master code [1 2 3 4 #]

The Door Relay changes its contacts for 5 sec.

The Green LED will light up for 5 sec. Repeat this step 2,3 times.

If the master code is wrongly typed in, the Red LED lights up for 3 sec. re-enter the Code as soon as the LED goes OFF.

**IMPORTANT:** CHANGE THE FACTORY SET MASTER CODE WHEN YOU PROGRAM YOUR UNIT FOR USE. THERE IS NO WAY TO RECOVER THE NEW MASTER CODE IF IT IS LOST OR FORGOTTEN. THE UNIT CAN BE RESET TO FACTORY PRESETS AND CUSTOMISED AGAIN. See Page 4 - Data Reset

### PROGRAMMING THE KEYPAD

Enter **★★1 2 3 4 ★★**

The keypad enters programming mode, the Red LED flashes



*If no further information is added, the unit will revert to normal operation after a 3 second delay. To exit programming press #.*

There are six programming options: -

**1. Set new master code**



*It is suggested the Master Code is not changed until person programming is familiar with all aspects of programming the keypad!*

**2. Set new user code**

**3. Erase a user code**

**4. Erase all user codes**

**5. Set door open time (1-99s)**

**6. Set output to latch option**

**1**

#### To set new master code



*TAKE TIME TO ALLOW EACH BUTTON INPUT / LED TO REGISTER*

Enter **★★1 2 3 4 ★★**

The keypad enters programming mode, the Red LED flashes

Enter **2**

The Red LED illuminates for 2 seconds and then flashes

Enter **0-0-0#**

The Red LED illuminates for 2 seconds and then flashes

Enter new 4-8 digit code

This is the new master code, record the number and keep it safe

Enter **#**

The Red LED illuminates for 2 seconds and then flashes

Re-enter the new master code

The Red LED illuminates for 2 seconds and then flashes

Enter **#**

Enter **#**

To exit programming mode

To set a new master code of 112233

Enter **★★master code★★ 2 000# 112233# 112233# #**

**2**

#### To set a new user code

Enter **★★master code★★**

The keypad enters programming mode, the Red LED flashes

Enter **2**

The Red LED illuminates for 2 seconds and then flashes

Enter address of new user code

i.e. 001 (001-200 accepted)

Enter **#**

The Red LED illuminates for 2 seconds and then flashes

Enter new 4-8 digit user code

This is the new user code, record the number and keep it safe

Enter **#**

The Red LED illuminates for 2 seconds and then flashes

Re-enter the new 4-8 digit user code

The Red LED illuminates for 2 seconds and then flashes

Enter **#**

The new code is added, to add new codes continue from second step, changing the address each time. When finished enter an additional # to exit programming mode.

Re-Enter **2** to set the next code  
or **#** to **EXIT**

To set a new user code of 6626 in address 1

Enter **★★master code★★ 2 001# 6626# 6626# #**

To set a new user code of 6626 in address 1 & 7788 in address 2

Enter **★★master code★★ 2 001# 6626# 6626# 2 002# 7788# 7788# #**

# Waterproof Keypad

## AS626S-200 & AS626M-200 Instructions

### 3 To remove an individual user code

*Only the user code addresses are removable, the master code may be changed but not removed*

**Enter**     ★★master code★★

The keypad enters programming mode, the Red LED flashes

**Enter**     3

The Red LED illuminates for 2 seconds and then flashes

**Enter**     address of user code to  
be removed

Example 001 (001-200 accepted)

**Enter**     #

The red LED illuminates for 2 seconds and then flashes (Address accepted)

**Enter**     address of user code to  
be removed

Example 001 (001-200 accepted)

**Enter**     #

The red LED illuminates for 2 seconds and then flashes the code is removed

**Enter**     #

Exit programming mode

### 4 To remove all user codes

**Enter**     ★★master code★★

The keypad enters programming mode, the red LED flashes

**Enter**     4

The Red LED illuminates for 2 seconds and then flashes

**Enter**     master code

**Enter**     #

The Red LED illuminates for 2 seconds and then flashes 40 sec. All user code addresses are removed

**Enter**     #

For exit programming

### 5 To set lock open time

**Enter**     ★★master code ★★

The keypad enters programming mode, the Red LED flashes

**Enter**     1

The Red LED illuminates for 2 seconds and then flashes

**Enter**     door open time

(01-99) Ex. 05 = 5 seconds

**Enter**     #

The Red LED illuminates for 2 seconds and then flashes

**Enter**     #

For exit programming

To set the door open time to 10 seconds

**Enter**     ★★master code★★ 1 10 # #

### 6 To set output relay to latching mode (On-Off)

**Enter**     ★★master code★★

The keypad enters programming mode, the Red LED flashes

**Enter**     1

The Red LED illuminates for 2 seconds and then flashes

**Enter**     00

**Enter**     #

The Red LED illuminates for 2 seconds and then flashes

**Enter**     #

The relay is set to latching mode



TO PROGRAM THE RELAY FOR A TIMED FUNCTIONING PLEASE PERFORM PROCEDURE 5.

### OPERATING THE KEYPAD

**Enter**     user code #

The relay operates and Green LED illuminates



If three incorrect attempts are made to enter a user code, the keypad will lock out for thirty seconds

### TROUBLE SHOOTING

The keypad does not “respond” when activating the keys.

1. Make sure the electronic unit has been properly wired to the PSU and the power has not been cut-off.

The keypad “responds” but the door does not open.

1. Make sure the Green LED is illuminated.
2. If not, the entered code has not been programmed yet. Please refer to “Programming”.
3. Enter the Master Code and make sure the door opens correctly. If not, check the wiring and the Lock’s integrity.

# Waterproof Keypad

## AS626S-200 & AS626M-200 Instructions

### DATA RESET

There are two basic models out in the field. Before attempting Data Reset identify the model concerned. Dependent on model select correct reset instructions.

In the event that programming administration is lost, or errors have been made in the programming, it is possible to set the keypad master back to the factory default:

#### Version 1

**Power off to keypad - wait 5 seconds - reapply power to Keypad**

**When power reapplied - if Red LED stays on for 1 second = Version 1**



*If the unit has been fitted with, this process will destroy the anti-tamper plugs*

**Remove anti-tamper plugs and the keypad from the wall**

**Press the reset button on the rear of keypad**

**Enter 1234#**

The red LED illuminates for 2 seconds and then flashes

The red LED illuminates for 2 seconds and a continuous tone is heard

**Press the reset button on the rear of keypad**

**Enter #**

The red LED illuminates for 2 seconds and then flashes

**Enter #**

The relay is set to open the door for 5 seconds

**Master code 1-2-3-4**

**User code 5-6-7-8-9-0**

#### Version 2

**Power off to keypad - wait 5 seconds - reapply power to Keypad**

**When power reapplied - if Red LED stays on for 3 seconds = Version 2**

**Power up the unit**

During the first 3 seconds the Red LED is ON

**Enter ★★1234#**

During the 3 seconds

The unit will sound 3 times and the data will be restored as follows

**Master code 1-2-3-4**

**User code 5-6-7-8-9-0**

Please erase this code at address 200

**Door open time 5 seconds**

### WARRANTY

This product is guaranteed for a period of **5 years** against defects in manufacture, workmanship or materials provided that all electrical and mechanical installation requirements are adhered to as per this instruction sheet. All third party and consequential claims are expressly excluded from this warranty.

**IEC Limited** Harwell Road Nuffield Estate Poole Dorset BH17 0BD Great Britain

Registered in England & Wales 1925537  
© January 2009 IEC. All rights reserved.  
All dimensions are nominal and subject to tolerances

**T 01202 676262**  
**F 01202 680101**  
**E alpro@iecltd.co.uk**  
**W www.alpro.co.uk**